ALIUM®
THE HOME SMART PHONE

Sagemcom

INSTALLATION GUIDE EN

1 CONNECTION AND INSTALLATION

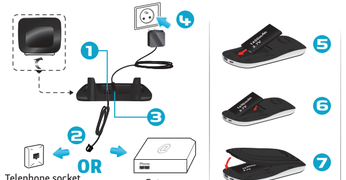

The handset starts automatically after it is placed on the charger cradle or the micro connector is connected.

If the battery is completely discharged, put the handset on the charger cradle for at least 20 minutes.

For optimal use, remove the protective film from the screen.



To avoid the risk of explosion, only use the battery provided in the pack.

2 USING THE TOUCH SCREEN

Touch/Press

Press one time the touch screen to access a menu, launch an application, confirm an action...

Hold down

Hold down the finger on the item until the telephone vibrates.

You can then:

- **from the desktop:**
  - change the location of item,
  - delete the item.
- **from the list of applications :**
  - add a shortcut on the desktop

- **unlock the touch screen**
- **In case of a call:**
  - accepting / rejecting the call

Swipe

You can scroll quickly the lists or the screens to up/down or left/right.

Pinch

On the screen, pinch two fingers together to zoom out or spread them apart to zoom in for images or webpages.

Rotate the handset

Rotate handset to display landscape mode.

3 YOUR TELEPHONE

1- The handset

Key «Home»:
- press to return to the home screen from any screen.
- Hold down to display the last launched applications

Key «Menu»:
- display the menu according to the context of use.

Location of the microSD card (already inserted)

Micro-USB socket

Camera

Key «Vol. +»:
- press to increase the volume

Key «Vol. -»:
- press to reduce the volume

Key «ON/OFF/Stand-by »:
- ON : hold down
- OFF : hold down
- Stand-by : press to switch off the screen / press to switch on the screen.

Key «Back»:
- press to return to the previous screen, close the virtual keypad, Close the menu of options

Jack socket (3.5 mm) for headphones

Connector of the charger cradle

2- Status bar

Status bar

Gives information about the handset activity. To obtain more information, slide down the status bar to display the notification pane.
Example of icons that can be displayed on the status bar:

WiFi signal (enable)
Software update available
Number of handset
New answering machine message(s)

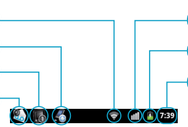

DECT signal
Battery status
Time

Desktop

Wallpaper: to change it, from the desktop press : → «Wallpaper»

Widget* : to add a widget from the desktop press: → «Add» → «Widgets»

Shortcuts: touch to launch the desired application

Active page of extended desktop. You can browse through the 5 pages of extended desktop by flicking the screen to the right or the left

Quick start bar

Numerical keypad : touch to access the dialling keypad

Phonebook : touch to access the phonebook

Touch to launch the web browser

Touch to access the answering machine

Touch to access the complete list of applications / configuration menus...

* widget is an application used from the desktop. By default, a numerical key-pad is installed as a widget.

4 CONFIGURATION WIZARD

When the handset start the first time, an assistant allows you to configure the main parameters.

1- Select the language of the menus

2- Configure the WiFi

You can configure the WiFi connection later from the «**Settings**» menu.

3- Registering the handset to the base (pairing)

If the icon appears on the screen, the handset is correctly registered to the base. Skip this configuration step by pressing «Next».

If the icon appears on the screen, proceed as follows:

1
Access to the pairing
2
Indicator light
Button
Hold down the button located behind the base (more than 3 seconds) until the indicator flashes
3
Active the handset registration
4
If , Confirm and go to the next setting
If , restart the process

If you need to associate the Alium handset later (or another handset), refer to the pairing section in the complete user manual available online at **www.sagemcom.com** in the section «support».

4- Select the country

5- Set date and time

5 ACCESS TO THE MENU

Accessing the «Contacts» menu

The first time you access to the «**Contacts**» menu, a guide explains the process to add a new contact.
To add a new contact:

Press → Touch «New contact» → Enter the information required → Press → «Done»

You can also access the «**Contacts**» menu by pressing from the quick start bar.

To access the «Settings» menu

The «**Settings**» menu allows to modify your telephone settings: WiFi, DECT, Display, Locking screen, Date and Time...

Example: to modify the call ring tone

6 COMMUNICATION

1- Making an external call

From the key-pad widget

You can also access the dialing keypad by pressing from the quick start bar.

From the Phonebook

2- Making an internal call

1. Access the dialling keypad
2. Access the «**Intercom**» section
3. Select the handset you want to call
4. The call screen appears

The Intercom call is only possible when multiple handsets are registered on the same base.

3- Receiving a call

1. The telephone rings and the call screen appears
2. Accept the call
3. The call screen appears

4- Ending a call

1. End a call
2. The call end screen appears

7 ANSWERING MACHINE

1- Consult your messages

The icon appears on the status bar when you received one or several message(s) on your answering machine.

1. Access the «**Answer phone**» menu

2. Use the control icons to read messages

	Play the message
	Pause
	Play the previous message
	Play the next message

	Calling the person who left you a message (if the phone number is available)
	Delete the message currently playing

8 GENERAL INFORMATION

For your personal safety, never place your handset on the charger cradle without the cover, or without the battery cover, you could get an electric shock.
To avoid damaging your handset, only use the supplied battery. Insert the batteries in the handset battery compartment respecting polarity.
At the end of its useful life, battery must be disposed of according to the recycling instructions presented in the «Environment» section of this booklet.

To avoid damaging your hearing, do not listen with a high volume for extended periods.

Do not attempt to remove the screws or open the cover. Any internal element of the device can be repaired by the user.

Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a safety measure, you can use the power adaptors to cut off the 230V current in case of danger. They must be located near to the device, and must be easily accessible.

Your telephone must not be installed in a humid room (wash room, bathroom, laundry room, kitchen, etc.) unless it is 1.50 m away from a water point, or outside. Your telephone must be operated at temperatures ranging from 5°C to 45°C.

In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device against overvoltages.
This equipment does not function in the case of an electric network shutdown: For the emergency calls, use a self-contained cord telephone.

Your DECT telephone has an inside radio range of about 50 meters and up to 200 meters in open space. The immediate presence of metal parts (of a television for example), or of any electric appliance may result in range reduction.
Zones without reception may appear owing to elements in the building. This can cause brief interruptions in the conversation, caused by faulty transmission.

This product is intended to be connected to the public analogical telephone network of any British and Irish network operator. Only use the supplied telephone cord. In case of a problem you must first contact your reseller.

Some sensitive medical equipment and safety equipment may be affected by the radio-frequency transmissions of your telephone. In all cases, we ask that you respect the safety recommendations.

The anti-skid pads in the base and the handset do not leave traces on your furniture and ensure stability. However, Given the diversity of lacquers and varnishes used by the furniture manufacturers, it cannot be excluded that traces is left on furniture surface. Sagemcom Broadband SAS decline all responsibility in any such cases of damage.

Batteries must be disposed of in accordance with the instructions in the «Environment» chapter.

9 CE

The CE label confirms that the product complies with the 1999/5/EC regulations of the European Union Parliament regarding wireless systems and telecommunications.
The declaration of compliance may be looked up on the **www.sagemcom.com** website section «support» or can be obtained from the following address :

Sagemcom Broadband SAS
250, route de l'Empereur - 92848 Rueil-Malmaison Cedex - France

10 ENVIRONMENT

Packaging
The logo (green point) on the packaging means that a fee is paid to an authorised national organisation to improve packaging recycling and the recycling infrastructure. Follow the local sorting regulations for this type of waste product in order to improve recycling.

Batteries
If your product contains batteries, they must be disposed of at the designated collection points.

The product
The crossed out dustbin displayed on the product signifies that it belongs to the electrical and electronic equipment group. The European regulations request you to carry out your own selective recycling collection at:

- the sales outlet when you buy a similar new device.
- the collection points available in your area (recycling centres, sorting points, etc).

This means you participate in the recycling and valorisation of used electric and electronic goods which would otherwise have a negative impact on the environment and health.

11 GUARANTEE

Terms and Conditions for United Kingdom & Ireland only

In order to apply the guarantee, you should contact the Sagemcom Helpdesk or the retailer where you purchased the equipment. Proof of purchase will be required in either case.

Please make sure that you use your equipment only for the purpose for which it was designed and under normal usage conditions.

Sagemcom do not accept any liability for the equipment if used outside the frame of its original designed purpose or any consequence that may arise from this usage.

Should any malfunction arise, the Sagemcom Helpdesk or your retailer will advise you how to proceed.

A) General Guarantee conditions
Sagemcom undertakes to remedy by repair or exchange at its own convenience, free of charge for labour and replacement parts, any defects in the equipment during the guarantee period of 12 (twelve) months or 3 (three) months for accessories, from the date of original invoice of the Equipment, where those defects are a result of faulty workmanship.

Unless the customer has concluded with Sagemcom a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer´s premises, the repairs will not be carried out on the equipment at the customer premises.

The customer must however return the defective equipment at his/her own expense, to the address supplied by the Sagemcom Helpdesk or by the retailer.

In the case that a product needs to be sent in for a repair, it must always be accompanied by a proof of purchase (which is not altered, written on or in any way made illegible) showing that the product is still under guarantee. In the case that no proof of purchase is enclosed, the Sagemcom repair centre will use the production date as its reference for establishing the guarantee status of the product.

Apart from all legal obligatory rules, Sagemcom, do not give any Guarantee, either implicit or explicit which is not set force in the present section, and can not be held responsible for any direct or indirect, material or immaterial damage, either in or out of the frame of the present guarantee.

If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

This guarantee does not affect the Customer statutory rights.

B) General Guarantee conditions
Sagemcom shall have no liability under the guarantee in respect of:
- Damage, defects, breakdown or malfunction due to one or more of the following:
  - -Failure to properly follow the installation process and instructions for use
  - -An external cause to the equipment (including but not limited to: lightening, fire, shock, vandalism, inappropriate conditions of electrical network or water damage of any nature)
  - -Modifications made without the written approval of Sagemcom
  - -Unsuitable operating conditions, particularly of temperature and humidity
  - -Repair or maintenance of the equipment by persons not authorised by Sagemcom
- Wear and tear from normal daily use of the equipment and its accessories
- Damage due to insufficient or bad packaging of equipment when returned to Sagemcom
- Usage of new versions of software without the previous approval of Sagemcom
- Work on any equipment or software modified or added without the prior written consent of Sagemcom
- Malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment.
- Communication problems related to an unsuitable environment including:
  - -Problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
  - -Transmission faults (for example poor geographical coverage by radio and TV transmitters, interference or poor line quality)
  - -Local network faults (wiring, servers, workstations) or the failure of the transmission network (such as but not limited to interferences, fault or poor quality of the network)
  - -Modification of the parameters of the cellular or broadcast network carried out after the sale of the Product
- Normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out. Servicing costs are in any event always borne by the customer.
- Malfunctions resulting from the usage of products, consumables or accessories not compatible with the equipment.

C) Out of Guarantee Repairs
In the cases set forth in B) as well as after expiry of the guarantee period, the customer must ask the Authorised Sagemcom Repair Centre for a cost estimation prior to work being carried out. In such cases, the repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the United Kingdom and Ireland.
www.sagemcom.com

This product contains opensource code, the sources are available on the website:
http://www.opensource.sagemcom.com

For more information,
refer to the complete user manual available online at
www.sagemcom.com
in the section
«support».

253517661A

Sagemcom